
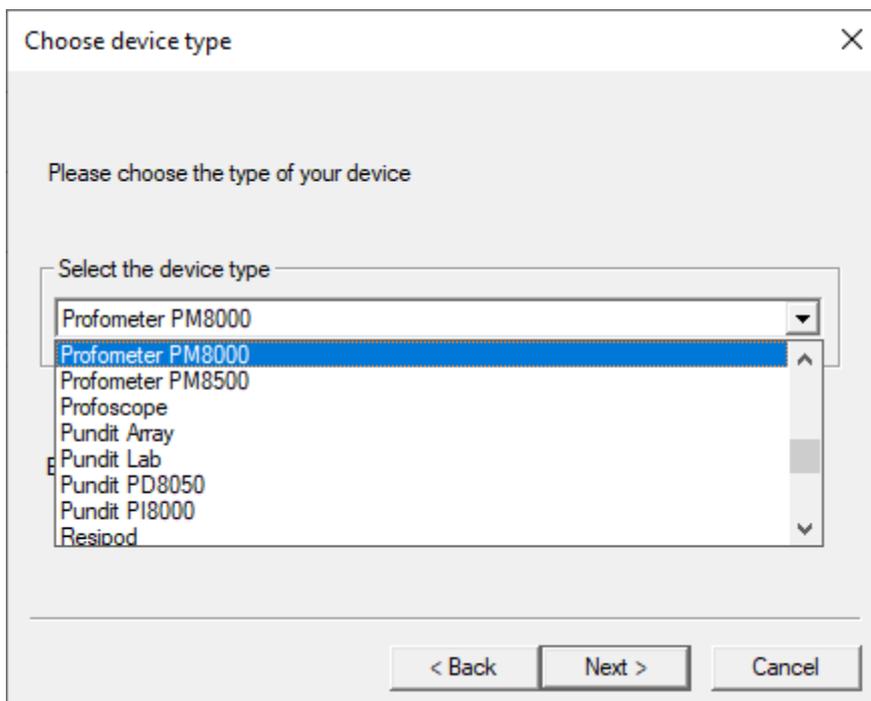


## PQ UPGRADE Software zur Geräte-Aktualisierung:

[www.hemmer.at/downloads/PqUpgrade\\_Setup.zip](http://www.hemmer.at/downloads/PqUpgrade_Setup.zip)

Upgrade-Software ggf. nach Installation aktualisieren

- ✓ Gerät über USB verbinden
- ✓ PqUpgrade starten
- ✓ Express (empfohlen) wählen → Next
- ✓ Profometer PM8000 wählen → Next
- ✓ Serial wählen (sollte automatisch gewählt sein) → Next
- ✓ Gerätedaten werden angezeigt sowie verfügbare Updates → Next
- ✓ Mit Benutzerkonto anmelden (Screening Eagle ID)  
(Falls noch kein Benutzerkonto angelegt, hier registrieren: <https://id.screeningeagle.com/signUp>)
- ✓ Gerätesoftware wird aktualisiert, Geräteverbindung nicht unterbrechen!

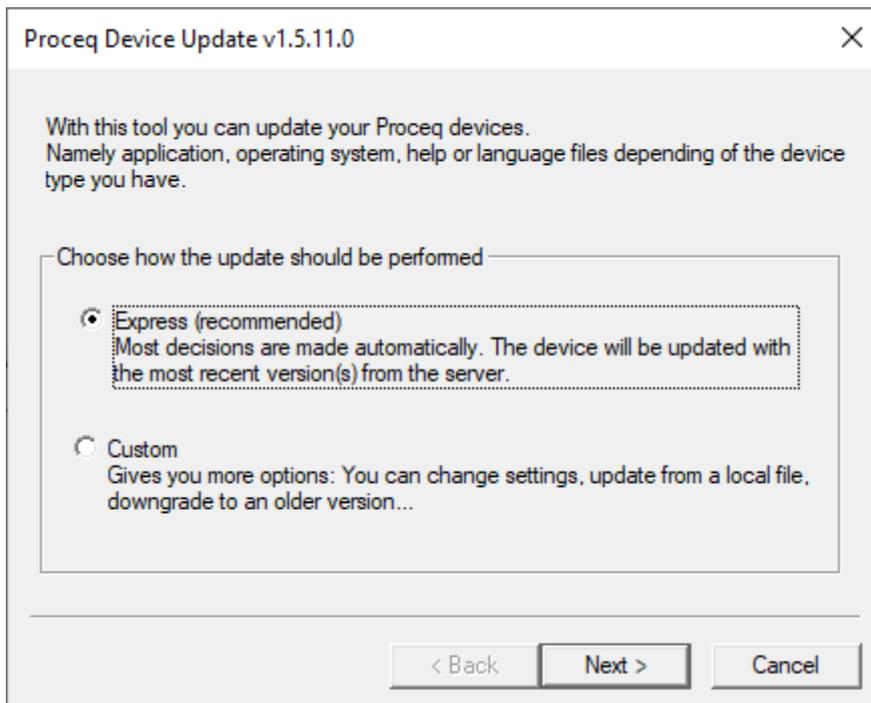

Choose communication type ×

Select the communication type

Serial

Choose the interface with which the device is connected to the PC.  
Note: - Only communication types supported by the device are displayed.  
- USB devices might be shown as serial.

Serial port settings

Find device automatically (Scan ports) or enter COM port number:

Ethernet settings

Device IP address:

Stop search after first device has been found. Help

< Back Next > Cancel

Device search result and selection ×

Finished device search, found device(s):

Select the device:

Serial number: PM80-003-0427 @ COM4

Info about the selected device:

Device type:	PM8000
Serial number:	PM80-003-0427
Firmware Version:	1.2.3
Hardware revision:	A3
Signature:	2A000000
Bluetooth Module:	
Serial number:	BT42-000-1270

< Back Next > Cancel